

FX101A Sense Fire Detection Panel

Instruction Sheet
R10003GB2



Schneider Electric
www.se.com/buildings

R10003GB2
May 2025

© 2018-2025 – Schneider Electric. All Rights Reserved. This information is only to be used as guidance. Subject to changes and errors.

Contents

Safety Information	4
1 FX101A Sense Fire Detection Panel overview.....	4
1.1 Panel installation	4
1.2 Connections	5
1.3 Commissioning and Configuration	5
2 FX101A panel external connections.....	6

Safety Information

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction, installation, and operation of electrical equipment and has received safety training to recognize and avoid the hazards involved.

1 FX101A Sense Fire Detection Panel overview

FX101A is a powerful standalone one loop fire detection control panel. The full range of Schneider Electric's ALC compatible intelligent detectors can be connected to the system.

Versatile built-in control logic enables easy control of both passive as well as active fire protective equipment and even a three-stage alert and evacuation alarm.

The panel is compatible with other fire detection equipment, such as the FMP Sense Fireman's Panel, zone led panel ZLPX, DAP Sense Delay Alarm Panel, REP Sense Protocol Repeater and MCO Sense Multi Logic Control Unit, as well as alarm management system ESGRAF. The system also provides an interface to the building management system.

Product	Product code
FX101A Sense Fire Detection Panel	FFS00703816nn

In a part number "nn" indicates the country version, for example:

- FI - Finland
FFS00703816FI
- SE - Sweden
FFS00703816SE

1.1 Panel installation

The FX101A panel is installed on a surface with the display at a height of approximately 170 cm. The wall has to be strong enough to support the weight of the panel and the batteries.

1.2 Connections

See overleaf for general overview of the connections of the FX101A panel.

Cable entries are from behind, from above and from below.

1.3 Commissioning and Configuration

The system can be started after the jumper settings are verified. For customer/site specific settings and entry of alarm texts, a PC and licensed software “WinFX3Net” is used. For further information, see the Installation and commissioning manual.

2 FX101A panel external connections

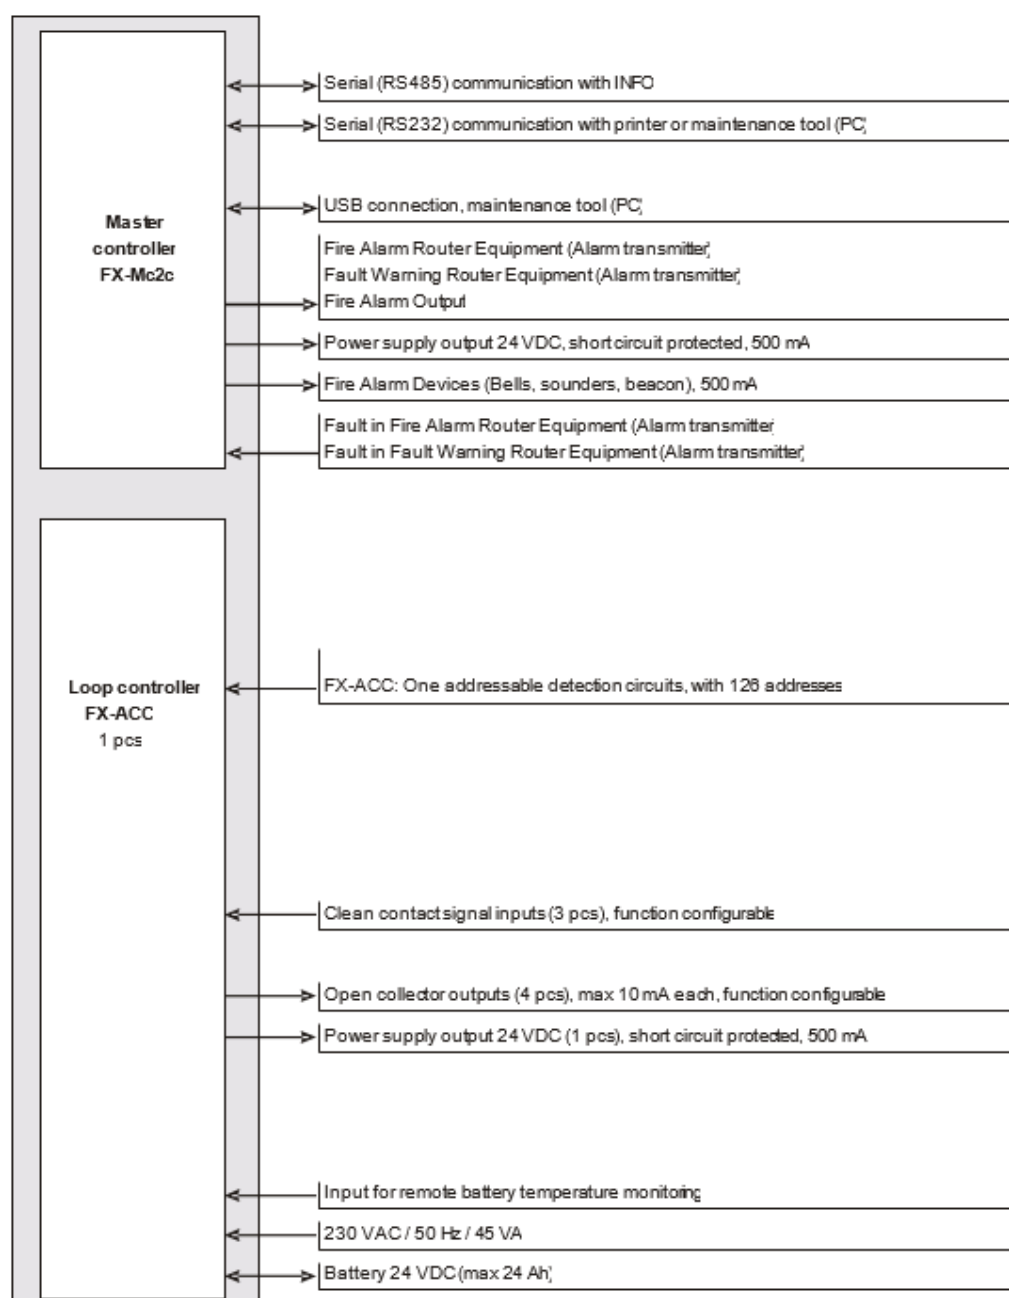


Figure 2. FX101A Sense Fire Detection Panel external connections

Note!

The max. 24 V current consumption of the **FX101A Sense Fire Detection Panel** (ACC-board, loop and all addresses and control panel outputs) is 0,5 A in standby condition and 1,4 A in alarm condition. The standby time required for the system may limit the max. load of the outputs.